


## COLOR COSMETICS

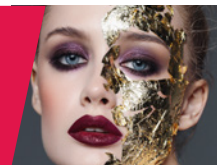

## My Best Friend-Concealer

PHASE	TRADE NAME	INCI	%W/W	SUPPLIER
A	MIRASIL® BALANCE	Cetyl PEG/PPG-10/1 Dimethicone	2.50	Elkem Silicones*
	MIRASIL® STEARYL DM	Stearyl Dimethicone	3.00	Elkem Silicones*
	CosVivet Berry wax	Rhus Verniciflua Peel Cera	2.50	Brenntag
	MIRASIL® CAPRYLYL TSO	Caprylyl Methicone	11.00	Elkem Silicones*
B	Sodium Benzoate	Sodium Benzoate	0.90	Various*
	Deionized Water	Aqua (Water)	68.60	
	Kronos 1171	Titanium Dioxide (CI 77891)	5.00	Kronos*
C	KenaPure Brown Iron Oxide	CI 77491 (and) CI 77492 (and) CI 77499	1.50	Brenntag
	PURESIL™ TMS DM 30	Trimethylsiloxysilicate (and) Dimethicone	5.00	Elkem Silicones*

\*Available from Brenntag

**Characteristics**

- / Very light formulation
- / Easy to apply

**Procedure**

1. Prepare phase A and phase B and heat to 75°C
2. Add phase B to phase A under high stirring for 10 min
3. Cool down to 30°C and add phase C

**Stability**

- / Viscosity: 42000 mPa.s M06 @ 10 rpm (Brookfield serie DV-II+Pro)
- / Stable 1 month at 50°C, 3 months at 4°C, 40°C and 25°C